

- 1 To set the visor in the forward position, flip it down.
- 2 To set the visor in the side position, flip down, unhook, and swing it to the side.
- To use the side extender, place the visor in the side position, then slide it backward.

3-7. Other interior features

Vanity mirrors



Slide the cover to open.

The light turns on when the cover is opened.

■ To prevent 12-volt battery discharge

When the "ENGINE START STOP" switch (RX350) or the "POWER" switch (RX450h) is turned off, the lights will go off automatically after 20 minutes.

↑ NOTICE

■ When not in use

Keep the vanity mirror closed.

The clock can be adjusted by pressing the buttons.

- ▶ With a navigation system Refer to the "Navigation System Owner's Manual".
- ► With the Lexus Display Audio system



- Adjusts the hours
- Adjusts the minutes

▶ Without a navigation system or the Lexus Display Audio system



- Adjusts the hours
- 2 Adjusts the minutes

■ The clock is displayed when

► RX350

The clock is displayed when the "ENGINE START STOP" switch is in ACCESSORY or $IGNITION\ ON\ mode.$

► RX450h

The clock is displayed when the "POWER" switch is in ACCESSORY or ON mode.

■ When the 12-volt battery is disconnected

The time display will automatically be set to 1:00.

3

Outside temperature display

The temperature display shows temperatures within the range of -40°F (-40°C) and 122°F (50°C).

- ▶ With a navigation system Refer to the "Navigation System Owner's Manual".
- ► With the Lexus Display Audio system



The outside temperature is displayed on the air conditioning operation screen. $(\rightarrow P. 412)$

▶ Without a navigation system or the Lexus Display Audio system



- If the temperature does not appear (without the Lexus Display Audio system)

 The system may be malfunctioning. Take your vehicle to your Lexus dealer.
- When "--" or "E" is displayed (with the Lexus Display Audio system)

 The system may be malfunctioning. Take your vehicle to your Lexus dealer.

■ Display

In the following situations, the correct outside temperature may not be displayed, or the display may take longer than normal to change:

- When the vehicle is stopped, or moving at low speeds (less than 16 mph [25 km/h])
- When the outside temperature has changed suddenly (at the entrance/exit of a garage, tunnel, etc.)

3

Multi-display light control*

The brightness of the multi-display can be adjusted to four levels.



Press and release the "DISP" switch until the brightness of the display is adjusted to the desired level.

■ Instrument panel linked brightness control

When the headlight switch is turned on, the brightness of the multi-display will be reduced in accordance with the brightness of the instrument panel. (\rightarrow P. 249)


Power outlets

The power outlets can be used for the following components.


12 V: Accessories that run on less than 10 A.

120 VAC: Accessories that use less than 100 W.

▶ Inside the console (12 V)

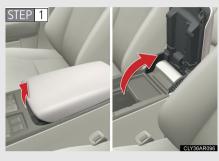

Pull up the lever to release the lock, and lift the armrest.

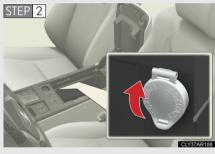

Open the cover.

► Under tray (12V)



Open the cover.

► Luggage compartment (12V)



Open the cover.

► On the back surface of the console (120 VAC)*



Open the cover.

*: If equipped

■ The power outlets can be used when

▶ 12 V

RX350: The "ENGINE START STOP" switch is in ACCESSORY or IGNITION ON mode.

RX450h: The "POWER" switch is in ACCESSORY or ON mode.

▶ 120 VAC

RX350: The "ENGINE START STOP" switch is in IGNITION ON mode.

RX450h: The "POWER" switch is in ON mode.

⚠ NOTICE

■ To avoid damaging the power outlets

Close the power outlet lid when the power outlet is not in use.

Foreign objects or liquids that enter the power outlet may cause a short circuit.

■ To prevent the fuse from being blown

Close the power outlet lid when the power outlet is not in use.

Foreign objects or liquids that enter the power outlet may cause a short circuit.

12 V: Do not use an accessory that uses more than 12 V 10 A.

120 VAC: Do not use a 120 VAC appliance that requires more than 100 W.

If a 120 VAC appliance that consumes more than 100 W is used, the protection circuit will cut the power supply.

■ To prevent 12-volt battery discharge

► RX350

Do not use the power outlets longer than necessary when the engine is off.

► RX450h

Do not use the power outlets longer than necessary when the hybrid system is off.

Appliances that may not operate properly (120 VAC)

The following 120 VAC appliances may not operate properly even if their power consumption is under 100 W:

- Appliances with high initial peak wattage
- Measuring devices that process precise data
- Other appliances that require an extremely stable power supply

The heated steering wheel heats the leather portions on the left and right of the steering wheel.



Turns the heater on/off

The indicator light comes on when the heater is operating.

■ The heated steering wheel can be used when

► RX350

The "ENGINE START STOP" switch is in IGNITION ON mode.

► RX450h

The "POWER" switch is in ON mode.

■ To prevent 12-volt battery discharge

The heated steering wheel will automatically turn off after about 30 minutes.

■ If the indicator light flashes

Press the button to turn the heated steering wheel off and then press the button again. If the indicator light still flashes, a malfunction may be occurring. Turn the heated steering wheel off and have the vehicle inspected by your Lexus dealer.

A CAUTION

■ Burns

Care should be taken to prevent injury if anyone in the following categories comes in contact with the steering wheel when the heated steering wheel is on:

- Babies, small children, the elderly, the sick and the physically challenged
- Persons with sensitive skin
- Persons who are fatigued
- Persons who have taken alcohol or drugs that induce sleep (sleeping drugs, cold remedies, etc.)

The seat heaters and ventilators heat the seats and maintain good airflow by blowing air from the seats.



- Turns the seat heater on
 The indicator light comes on.
 The higher the number is, the warmer the seat becomes.
- Plows air from the seat The indicator light comes on. The higher the number is, the stronger the airflow becomes.

Operating condition

► RX350

The "ENGINE START STOP" switch is in IGNITION ON mode.

► RX450h

The "POWER" switch is in ON mode.

■ When not in use

Set the knob at "0". The indicator light turns off.

A CAUTION

■ Burns

- Use caution when seating the following persons in a seat with the seat heater on to avoid the possibility of burns:
 - Babies, small children, the elderly, the sick and the physically challenged
 - Persons with sensitive skin.
 - Persons who are fatigued
 - Persons who have taken alcohol or drugs that induce sleep (sleeping drugs, cold remedies, etc.)
- Do not cover the seat with anything when using the seat heater. Using the seat heater with a blanket or cushion increases the temperature of the seat and may lead to overheating.



∧ NOTICE

■ To prevent damage to the seat heaters/ventilators

Do not put heavy objects that have an uneven surface on the seat and do not stick sharp objects (needles, nails, etc.) into the seat.

■ To prevent 12-volt battery discharge


► RX350

Do not leave the system on longer than necessary when the engine is off.

► RX450h

Do not leave the system on longer than necessary when the hybrid system is off.

Armrest

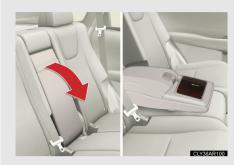


Pull the armrest down for use.

↑ NOTICE

■ To prevent damage to the armrest

Do not place too much strain on the armrest.

Coat hooks

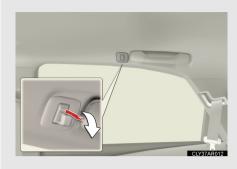

To use the coat hook, push it in.

A CAUTION

■ Items that must not be hung on the hook

Do not hang a coat hanger or other hard or sharp object on the hook. If the SRS curtain shield airbags deploy, these items may become projectiles that cause death or serious injury.

Assist grips

An assist grip installed on the ceiling can be used to support your body while sitting on the seat.



A CAUTION

Assist grip

Do not use the assist grip when getting in or out of the vehicle or rising from your seat.


↑ NOTICE

■ To prevent damage to the assist grip


Do not hang any heavy object or put a heavy load on the assist grip.

Floor mat

Use only floor mats designed specifically for vehicles of the same model and model year as your vehicle. Fix them securely in place onto the carpet.

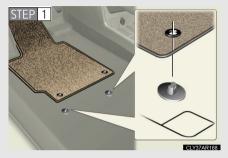

Insert the retaining hooks (clips) into the floor mat eyelets.

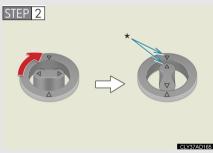

Turn the upper knob of each retaining hook (clip) to secure the floor mats in place.

*: Always align the Δ marks.

The shape of the retaining hooks (clips) may differ from that shown in the illustration.

A CAUTION

Observe the following precautions.

Failure to do so may cause the driver's floor mat to slip, possibly interfering with the pedals while driving. An unexpectedly high speed may result or it may become difficult to stop the vehicle, leading to a serious accident.

■ When installing the driver's floor mat

- Do not use floor mats designed for other models or different model year vehicles. even if they are Lexus Genuine floor mats.
- Only use floor mats designed for the driver's seat.
- Always install the floor mat securely using the retaining hooks (clips) provided.
- Do not use two or more floor mats on top of each other.
- Do not place the floor mat bottom-side up or upside-down.

■ Before driving



- Check that the floor mat is securely fixed in the correct place with all the provided retaining hooks (clips). Be especially careful to perform this check after cleaning the floor.
- RX350: With the engine stopped and the shift lever in P, fully depress each pedal to the floor to make sure it does not interfere with the floor mat.

RX450h: With the hybrid system stopped and the shift lever in P, fully depress each pedal to the floor to make sure it does not interfere with the floor mat.

Luggage compartment features

■ Cargo hooks



Pull the hook to use.

The cargo hooks are provided for securing loose items.

■ Auxiliary boxes

▶ Deck side boxes



Pull the strap upwards when lifting the cover up.


► Deck floor box (if equipped)




Pull the lever upwards when lifting the deck board up.



■ Luggage cover (if equipped)

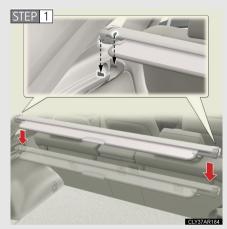


Push from above until the claws on both sides are securely locked in position.

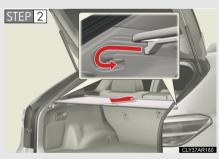

Pull out the luggage cover and hook it onto the anchors.

Removing the luggage covers

► Front luggage cover

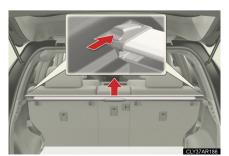


Press the buttons to remove the luggage cover.

► Rear luggage cover



Detach the outer clips of the rear luggage cover from the back door.

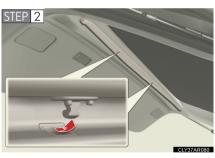

Detach the inner clips of the rear luggage cover from the back door.

■ Installing the rear luggage cover

- Ensure that the luggage cover is in the proper installation position.
 Push the clips of the rear luggage cover into the indentions on the back door until they are locked into place.
- Check that the rear luggage cover is securely attached.



A CAUTION

■ When the cargo hooks are not in use


To avoid injury, always return the cargo hooks to their stowed positions.

The garage door opener can be programmed to operate garage doors, gates, entry doors, door locks, home lighting systems, security systems, and other devices.

The garage door opener (HomeLink $^{\circledR}$ Universal Transceiver) is manufactured under license from HomeLink $^{\circledR}.$

Programming the HomeLink® (for U.S.A. owners)

The HomeLink[®] compatible transceiver in your vehicle has 3 buttons which can be programmed to operate 3 different devices. Refer to the programming method below appropriate for the device.

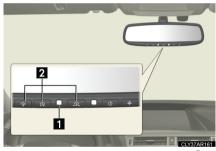

Indicator


2 Buttons

■ Programming the HomeLink®




Point the remote control transmitter for the device 1 to 3 in. (25 to 75 mm) from the $HomeLink^{\circledR}$ control buttons.

Keep the HomeLink[®] indicator light in view while programming.

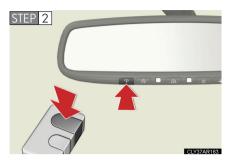

Press and hold one of the HomeLink[®] buttons and the transmitter button. When the HomeLink[®] indicator light changes from a slow to a rapid flash, you can release both buttons.

If the HomeLink[®] indicator light comes on but does not flash, or flashes rapidly for 2 seconds and remains lit, the HomeLink[®] button is already programmed. Use the other buttons or follow the "Reprogramming a HomeLink[®] button" instructions. (→P. 708)

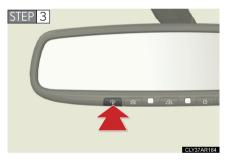

Test the HomeLink[®] operation by pressing the newly programmed button.

If a HomeLink[®] button has been programmed for a garage door. check to see if the garage door opens and closes. If the garage door does not operate, see if your remote control transmitter is of the rolling code type. Press and hold the programmed HomeLink® button. The remote control transmitter is of the rolling code type if the HomeLink[®] indicator light flashes rapidly for 2 seconds and then remains lit. If your transmitter is of the rolling code type, proceed to the heading "Programming a rolling code system".

Repeat the steps above to program another device for each of the remaining HomeLink[®] buttons.

■ Programming a Rolling Code system (for U.S.A. owners)

If your device is Rolling Code equipped, follow the steps under the heading "Programming the HomeLink®" before proceeding with the steps listed below.

STEP 1 Locate the learn button on the ceiling mounted garage door opener motor. The exact location and color of the button may vary by brand of garage door opener motor.

Refer to the operation manual supplied with the garage door opener for the location of the learn button.

STEP 2 Press the learn button.

Following this step, you have 30 seconds in which to initiate step 3 below.

Press and hold the vehicle's programmed HomeLink[®] button for 2 seconds and release it. Repeat this step once again. The garage door may open.

If the garage door opens, the programming process is complete. If the door does not open, press and release the button a third time. This third press and release will complete the programming process by opening the garage door.

The ceiling mounted garage door opener motor should now recognize the HomeLink $^{\circledR}$ signal and operate the garage door.

Repeat the steps above to program another rolling code system for any of the remaining HomeLink[®] buttons.

■ Programming an entry gate (for U.S.A. owners)/Programming all devices in the Canadian market

STEP 1 Place your transmitter 1 to 3 in. (25 to 75 mm) away from the surface of the HomeLink $^{\circledR}$.

Keep the HomeLink® indicator light in view while programming.

- STEP 2 Press and hold the selected HomeLink® button.
- Repeatedly press and release (cycle) the device's remote control button for two seconds each until step 4 is completed.
- When the indicator light on the HomeLink[®] compatible transceiver starts to flash rapidly, release the buttons.

- STEP 5 Test the operation of the HomeLink[®] by pressing the newly programmed button. Check to see if the gate/device operates correctly.
- Repeat the steps above to program another device for each of the remaining HomeLink[®] buttons.

■ Programming other devices

To program other devices such as home security systems, home door locks or lighting, contact your authorized Lexus dealer for assistance.

■ Reprogramming a button

The individual HomeLink[®] buttons cannot be erased but can be reprogrammed. To reprogram a button, follow the "Reprogramming a HomeLink[®] button" instructions.

Operating HomeLink®


Press the appropriate $\mathsf{HomeLink}^{\$}$ button. The $\mathsf{HomeLink}^{\$}$ indicator light should turn on.

The HomeLink $^{\circledR}$ compatible transceiver in your vehicle continues to send a signal for up to 20 seconds as long as the button is pressed.

Reprogramming a HomeLink® button

Press and hold the desired HomeLink[®] button. After 20 seconds, the HomeLink[®] indicator light will start flashing slowly. Next, while still pressing and holding the HomeLink[®] button, press and hold the button on the transmitter until the HomeLink[®] indicator light changes from a slow to a rapid flash.

Erasing the entire HomeLink® memory (all three programs)

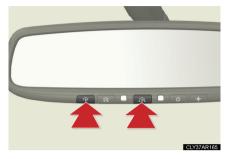

Press and hold the 2 outside buttons for 10 seconds until the indicator light flashes.

If you sell your vehicle, be sure to erase the programs stored in the HomeLink[®] memory.

■ Before programming

- Install a new battery in the remote control transmitter.
- The battery side of the remote control transmitter must be pointed away from the HomeLink[®] button.

■ When programming

Depending on radio wave conditions, the direction the remote control transmitter is pointed and the remaining charge of the transmitter's batteries, there are cases when programming may be difficult.

■ Certification for the garage door opener

► For vehicles sold in the U.S.A.

FCC ID: NZLGHSHL4 FCC ID: NZLOBIHL4 FCC ID: NZLWZLHL4

NOTE:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC WARNING.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

► For vehicles sold in Canada

NOTF:

Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

■ When support is necessary

Visit on the web at www.homelink.com or call 1-800-355-3515.

A CAUTION

■ When programming a garage door or other remote control device

The garage door or other device may operate, so ensure people and objects are out of danger to prevent potential harm.

■ Conforming to federal safety standards

Do not use the HomeLink[®] compatible transceiver with any garage door opener or device that lacks safety stop and reverse features as required by federal safety standards.

This includes any garage door that cannot detect an obstruction object. A door or device without these features increases the risk of death or serious injury.

The compass on the inside rear view mirror indicates the direction in which the vehicle is heading.

■ Operation




To turn the compass on or off, press for more than 3 seconds.

The location the compass is displayed differs according to the type of inner rear view mirror.

■ Displays and directions

Display	Direction
"N"	North
"NE"	Northeast
"E"	East
"SE"	Southeast
"S"	South
"SW"	Southwest
"W"	West
"NW"	Northwest

Calibrating the compass

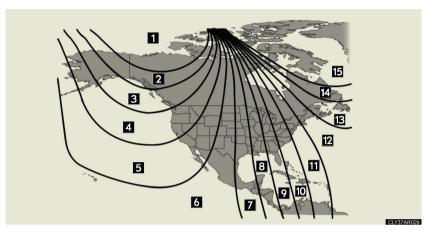


The direction display deviates from the true direction determined by the earth's magnetic field. The amount of deviation varies depending on the geographic position of the vehicle.

If you cross over one of the map boundaries shown in illustration, the compass will deviate.

To obtain higher precision or perfect calibration, refer to "Deviation calibration".

■ Deviation calibration

STEP 1 Stop the vehicle.

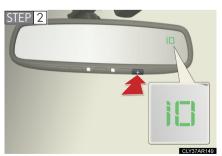

compass display.

The location the compass is displayed differs according to the type of inner rear view mirror. Referring to the map above, press to select the number of the zone you are in.

If the direction is displayed for several seconds after adjustment, the calibration is complete.

■ Circling calibration



If "C" appears on the display, drive the vehicle at 5 mph (8 km/h) or less in a circle until a direction is displayed.

If there is not enough space to drive in a circle, drive around the block until a direction is displayed.

■ Conditions unfavorable to correct operation

The compass may not show the correct direction in the following conditions:

- The vehicle is stopped immediately after turning.
- The vehicle is on an inclined surface.
- The vehicle is in a place where the earth's magnetic field is subject to interference by artificial magnetic fields (underground car park/parking lot, under a steel tower, between buildings, roof car park/parking lot, near an intersection, near a large vehicle, etc.).
- The vehicle has become magnetized. (There is a magnet or metal object near the inside rear view mirror.)
- The 12-volt battery has been disconnected.
- A door is open.



CAUTION

■ While driving the vehicle

Do not adjust the display. Adjust the display only when the vehicle is stopped.

■ When doing the circling calibration

Secure a wide space, and watch out for people and vehicles in the vicinity. Do not violate any local traffic rules while performing circling calibration.



↑ NOTICE

■ To avoid compass malfunctions

Do not place magnets or any metal objects near the inside rear view mirror. Doing this may cause the compass sensor to malfunction.

■ To ensure normal operation of the compass


- Do not perform a circling calibration of the compass in a place where the earth's magnetic field is subject to interference by artificial magnetic fields.
- During calibration, do not operate electric systems (moon roof, power windows, etc.) as they may interfere with the calibration.

Safety Connect is a subscription-based telematics service that uses Global Positioning System (GPS) data and embedded cellular technology to provide safety and security features to subscribers. Safety Connect is supported by Lexus' designated response center, which operates 24 hours per day, 7 days per week.

Safety Connect service is available by subscription on select, telematics hardware-equipped vehicles.

By using the Safety Connect service, you are agreeing to be bound by the Telematics Subscription Service Agreement and its Terms and Conditions, as in effect and amended from time to time, a current copy of which is available at Lexus.com. All use of the Safety Connect service is subject to such then-applicable Terms and Conditions.

■ System components

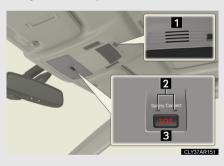

- 1 Microphone
- 2 LED light indicators
- SOS" button

Services

Subscribers have the following Safety Connect services available:

- ◆ Automatic Collision Notification*
 Helps drivers receive necessary response from emergency service providers. (→P. 718)
 - *: U.S. Patent No. 7.508.298 B2
- Stolen Vehicle Location
 Helps drivers in the event of vehicle theft. (→P. 719)
- Emergency Assistance Button (SOS)
 Connects drivers to response-center support. (→P. 719)
- Enhanced Roadside Assistance
 Provides drivers various on-road assistance. (→P. 719)

■ Subscription

After you have signed the Telematics Subscription Service Agreement and are enrolled, you can begin receiving services.

A variety of subscription terms is available for purchase. Contact your Lexus dealer, call 1-800-25-LEXUS (1-800-255-3987) or push the "SOS" button in your vehicle for further subscription details.

■ Safety Connect Services Information

- Phone calls using the vehicles Bluetooth[®] technology will not be possible during Safety Connect.
- Safety Connect is available beginning Fall 2009 on select Lexus models. Contact with the Safety Connect response center is dependent upon the telematics device being in operative condition, cellular connection availability, and GPS satellite signal reception, which can limit the ability to reach the response center or receive emergency service support. Enrollment and Telematics Subscription Service Agreement required. A variety of subscription terms is available; charges vary by subscription term selected.
- Automatic Collision Notification, Emergency Assistance and Stolen Vehicle Location will function in the United States, including Hawaii and Alaska, and in Canada, and Enhanced Roadside Assistance will function in the United States (except Hawaii) and in Canada. No Safety Connect services will function outside of the United States in countries other than Canada.
- Safety Connect services are not subject to section 255 of the Telecommunications Act and the device is not TTY compatible.

Languages

The Safety Connect response center will offer support in multiple languages. The Safety Connect system will offer voice prompts in English and Spanish. Please indicate your language of choice when enrolling.

■ When contacting the response center

You may be unable to contact the response center if the network is busy.

Safety Connect LED light Indicators

- RX350: When the "ENGINE START STOP" switch is turned to IGNI-TION ON mode, the red indicator light comes on for 2 seconds then turns off. Afterward, the green indicator light comes on, indicating that the service is active.
- RX450h: When the "POWER" switch is turned to ON mode, the red indicator light comes on for 2 seconds then turns off. Afterward, the green indicator light comes on, indicating that the service is active.
- The following indicator light patterns indicate specific system usage conditions:
 - Green indicator light on = Active service
 - Green indicator light flashing = Safety Connect call in process
 - Red indicator light (except at vehicle start-up) = System malfunction (contact your Lexus dealer)
 - No indicator light (off) = Safety Connect service not active

Safety Connect services

■ Automatic Collision Notification

In case of either airbag deployment or severe rear-end collision, the system is designed to automatically call the response center. The responding agent receives the vehicle's location and attempts to speak with the vehicle occupants to assess the level of emergency. If the occupants are unable to communicate, the agent automatically treats the call as an emergency, contacts the nearest emergency services provider to describe the situation, and requests that assistance be sent to the location.

■ Stolen Vehicle Location

If your vehicle is stolen, Safety Connect can work with local authorities to assist them in locating and recovering the vehicle. After filing a police report, call the Safety Connect response center at 1-800-25-LEXUS (1-800-255-3987) and follow the prompts for Safety Connect to initiate this service.

In addition to assisting law enforcement with recovery of a stolen vehicle, Safety-Connect-equipped vehicle location data may, under certain circumstances, be shared with third parties to locate your vehicle. Further information is available at Lexus.com.

■ Emergency Assistance Button ("SOS")

In the event of an emergency on the road, push the "SOS" button to reach the Safety Connect response center. The answering agent will determine your vehicle's location, assess the emergency, and dispatch the necessary assistance required.

If you accidentally press the "SOS" button, tell the response-center agent that you are not experiencing an emergency.

■ Enhanced Roadside Assistance

Enhanced Roadside Assistance adds GPS data to the already included warranty-based Lexus roadside service.

Subscribers can press the "SOS" button to reach a Safety Connect response-center agent, who can help with a wide range of needs, such as: towing, flat tire, fuel delivery, etc. For a description of the Enhanced Roadside Assistance services and their limitations, please see the Safety Connect Terms and Conditions, which are available at Lexus.com.

Safety information for Safety Connect

Important! Read this information before using Safety Connect.

■ Exposure to radio frequency signals

The Safety Connect system installed in your vehicle is a low-power radio transmitter and receiver. It receives and also sends out radio frequency (RF) signals.

In August 1996, the Federal Communications Commission (FCC) adopted RF exposure guidelines with safety levels for mobile wireless phones. Those guidelines are consistent with the safety standards previously set by the following U.S. and international standards bodies.

- ANSI (American National Standards Institute) C95.1 [1992]
- NCRP (National Council on Radiation Protection and Measurement) Report 86 [1986]
- ICNIRP (International Commission on Non-Ionizing Radiation Protection) [1996]

Those standards were based on comprehensive and periodic evaluations of the relevant scientific literature. Over 120 scientists, engineers, and physicians from universities, and government health agencies and industries reviewed the available body of research to develop the ANSI Standard (C95.1).

The design of Safety Connect complies with the FCC guidelines in addition to those standards.

■ Certification for Lexus Enform with Safety Connect

FCC ID: O9EGTM1

FCC ID: O6Y-CDMRF101

NOTE:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC WARNING:

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.